Portable Bluetooth Speaker



Thank you for purchasing the outdoor Bluetooth speaker Sbode 06. To ensure correct operation, please read this user manual carefully before

Contact us at: Email: support@sbode-tech.com

Have a problem with your product?

Sbode Sbode 06 User Manual

Dear customer.

Thank you for purchasing the bluetoothspeaker Sbode 06. To ensure correct operation, please read this user manuacarefully before operation

Shode remains competitive in the audio industry as a professional all over the world. We are a well-established manufacturerwho develops the most cutting-edgeaudio technology as well as owning exclusive tooling.

In addition to creating state of the art audio technology we pride ourselves in ensuring customer satisfaction.

Contact us

If you have any guestions about us, please feel free to contact us by Email: support@sbode-tech.com

IMPORTANT SAFFTY INSTRUCTIONS

Keep speaker away from any source of heat

- Take care when charging the speaker, excessive prolonged charging will damage the bettery lifetime. Charge the speaker to full capacity when using for the first time.
- When battery low, the indicator light will flash and voice prompt "battery low", please
- If does not use this speaker for long time, please charge at least once within one month. order to prevent the lithium battery from causing and damaging because of excessive
- Adjust the volume to appropriate level to avoid disturbing others

Shode

Bluetooth Music and Mobile Hands-free Function

Bluetooth 42 stereo music playing, support mobile hands-free function.

Work as the external speaker by connecting to the audio source of computer, mobile,

Support MP3/WAV/WMA/FLAC/APE music format capacity up to 32G

With built-in antenna for better signal reception, support auto scan the FM channels.

Built-in battery with charging function

The charging function can be achieved via the included Micro USB cable.

- Water-resistance at IPX6

The speaker will prompt the working mode and status for easy operation.

Support TWS Function

True Wireless Stereo (two same speakers can in group pair and play music at the same time)

Two aluminum passive radiator (top and bottom), will shake with the music.

Technical data

Bluetooth Version: 42 Output:6W x 2

Driver: 40mm x 2 + passive radiator x 2(top + bottom)

Impedance: 4Ω Power Input: DC 5V 1A Aux In Jack: 3.5mm

Built-in Battery: 37V 2200 mAh, IWh 8 141 FM Frequency: 875MHz ~ 108MHz

Support Profiles: HSP, HFP, A2DP Charging Time: 4 hours (5V 1A adapter

Sbode

Net Weight: 352G Size: H 41 inch x @ 34 inch

Playing Time: 6 hours at 70% volume

Package contents

Bluetooth Speaker, Micro USB Cable, Aux in Cable, User Manual

Solt and Keys



Long press to power on/off the

Short press: Switch the working mod (Bluetooth mode, FM mode)

Please Note: if no Aux in cable and OTG USB inserting. The speaker will Power on the speaker and enter into Bluetooth mode, the Bluetooth skip to prompt the USB mode and Aux

2 — Long press: Previous track Previous FM Channel / Switch the phone call between mobile and speaker, Short press: Decrease Volume

Auto scan the FM channels Double Short press: Switch the previous folder of the USB Flash disk (under FM mode)

Sbode

 N/A (under aux in mode) 3. Long press: Next track / Next FM Channel / Switch the phone call between mobile and speaker Long press: Increase Volume Double Short press: Switch the next folder of the USB Flash disk

4 Short press: Play / Pause / Mute/ Answer / Hand up the phone call Double

- Long press: Enter / Exit the TWS function Disconnect the Bluetooth pairing
- Aux In Jack Disconnect and clear the TWS pairing
- Charging Port / OTG Slot for Reject the phone call (Under Bluetooth USB Music mode and phone call coming) Reset Hole

Instructions

1. Power On / Off the speaker

Long press Dutton for 2 seconds to power on/off the speaker. Each time re-power on the speaker, the speaker volume will be under 40% (If start playing with full volume, it may disturb or scare someone

2. Bluetooth Mode

1) Bluetooth Paired

indicator will twinkle in blue and waiting to pair. Now please turn on the Bluetooth function of your mobile/other devices. And start to search for Bluetooth devices, the "Shode 06" will be found, please connect it. When connected, the speaker will prompt "Device paired" and the LED indicator will be constant in blue

2) Bluetooth Music

Please turn on the mobile or other devices' music player, and speaker wi play the selected music

Sbode

3) Mobile Hands-free Communication

Answer the call

- Short Press button to answer the call • End the call
- Short Press button again to end the call
- Private Call

Short press - or - to switch the call between the speaker and cellpho

Long press | button to reject the call

4) Disconnect the Current Bluetooth Connection

The speaker will pair with the latest used Bluetooth device automatical Long press the M button to disconnect the current Bluetooth connecti The speaker will prompt "Device disconnected". Then other Bluetooth devices can find and pair with the speaker

3 Voice Prompt

Power on the speaker the speaker will prompt the working mode, such as "Bluetooth mode. FM Radio mode, device paired, device disconnected..."

4 TWS (True Wireless Stereo) Function Power on two Shode 06 Speakers and switch both two speakers to

Bluetooth mode.

Long press the M button of either speaker, this speaker will search the another Sbode 06 speaker (During searching, this speaker's LED indicator is under grange and blue light flash alternatively). Then the two speaker can pair automatically. After connecting successfully. The LED indicator of two Shode 06 speakers, flashing in blue is the left channel. The other speaker LED indicator, constant in orange is the right channel.

Now please turn on the Bluetooth function of your mobile/other devices And start to search for Bluetooth devices, the "Shode 06" will be found, please connect it. When connected the left channel speaker will prompt "Device

Sbode

paired" and blue LED light will be in constant blue. Then the two speakers ca play the Bluetooth music at the same time

Disconnect the two pairing speaker, double short press the libutton of either two speaker. The speaker will prompt "TWS disconnected" Long press the M button of either two speaker can clear the TWS pairing.

Please Note:

1)Using this function need 2 pcs power on VM-BS22 speakers 2) Before the TWS pairing, both two speaker did not connect to other Bluetooth device, the two speaker's LED indicator all are flashing in blue

the speaker will prompt "TWS Cleared"

3. Micro SD Card Music Playing Inserting the Micro SD Card into the speaker(follow the picture), short press to

6. Aux in Mode

power button the enter the SD card mode. The speaker will play the Micro SD Card music directly. Speaker will prompt memory card mode."

Micro SD Card

9. Charging

Please use the good quality adaptor to charge the speaker.

button to pause/mute for more than 10 minutes.

- We suggest to use the adaptor specification at 5V/1A When speaker with low battery capacity, please charge the speaker
- computer to charge the speaker, as the current only at 500 mA, the chaging time will be very long.

Sbode

When the speaker connect to the PC via the Aux In cable to play music. W

suggest use the branded adaptor (5V 1A) instead of the PC USB Port to

Make sure the speaker is under Aux In mode when using this function

Short press the hutton to the FM mode (the speaker will voice "FM

searching and save the FM channels. Long press the " - / - buttons for

(1) Under Bluetooth mode, the speaker is waiting to pair for more than 10

(2) Under Memory card mode / FM mode / Aux In mode, if press the MI

When speaker with low battery capacity, the speaker will prompt "battery

low". Please charge the battery via a USB adaptor immediately. During

charging, the orange LED charging indicator (near the charging slot) is

always on. When fully charged, the charging LED indicator will turn off.

mode"); Under Fm Mode, please long press the M button to auto

The speaker will be automatically powered off in below cases:

Note: Please long press (1) button again to power on the speaker

Short press the S button, the music will be mute on the speaker. But the

charge the speaker. As the computer's power supply is week.

music from the audio source

audio source is playing the music

8. Intelligent power saving function

previous / next channel.

7 FM Radio

Troubleshooting

1. What should I do if the speaker cannot pair with the Bluetooth device and play music accordingly? (1) Please check the specification/ the manual of the Bluetooth device (your

- mobile or computer), and check if the device can support the A2DP stereo audio transmission. If yes, please turn on the A2DP stereo mode.
- (2) Ensure the speaker at the Bluetooth status, if there are many bluetooth devices around you, it may be hard to scan, then please turn off other devices

2. What should I do if the USB flash disk cannot work? (1) Ensure that the USB flash disk is in good condition. Also check that the

audio files are the correct formats - MP3/WMA/WAV/APE/FLAC (2) Besides the above case, the problem maybe the compatibility of the USB

Sbode

flash disk. We recommend you formatting the USB Flash disk to FAT32 file formats

3. What should I do if the speaker get stuck and all the button can not working

The speaker's inner system may be wrong with some inappropriate operation Please try using a needle on the reset hole next to the charging port.

4 What should I do if the speaker cannot receive the FM channels?

- (1) Make sure the speaker is under the environment with covering the
- (2) To adjust the speaker direction to make the speaker with better reception (3) Make sure under the FM mode, long press the button to auto search

Shenzhen Sbode Technology Co., Ltd

Address: Block 2, Hehe Science Park, Daxing Community Guanlan Street, Longhua District, Shenzh en, China

Contact us by Email: support@sbode-tech.com 10 ((())





USER MANUAL

IN" mode (the speaker will prompt "Aux in" mode). The speaker will play the

Use the 3.5mm audio cable included to connect the speaker to an audio

source (PC_MP3/MP4_mobile phone). Short press the (1) button to enter "Al-

The speaker can be charged by different charging current, if using the

Execution standard: GB8898-2011; GB13 837 2012; GB17625.1 2013